

Glasses Camera User Manual

Model: G3000

HD 1080P DVR





How to Use:

Step 1. Power on and record video:

Long press the power button for 3 seconds until the blue light flashes 3 times and then goes out, at this point, the camera has started working and is recording video.

Step 2. Check Working State:

Press the power button once to check if your camera is recording.

If the blue light flashes 1 time and then goes out, your glasses camera is recording a video. If the indicator light does not respond, it means your camera is powered off.

Step 3. Power Off & Save Video:

When you need to stop recording video, press the power button for 3 seconds, then the red light will flash 3 times and then release the button. The camera will turn off and save the video automatically.

Step 4. Charge battery:

When connecting the glasses camera to a power supply, the red light will be solid on. The red light will turn to blue light when the glasses camera is fully charged.

Step 5. Shutdown in Low Power:

When the system detects that the battery voltage is low power, it will automatically shut down, the red and blue lights flash for 3 seconds to enter shutdown; and it will auto save the file being recorded.

Step 6. USB Flash Drive Mode:

When the camera has a TF card, insert into the phone OTG or computer and enter USB drive mode; When the camera does not have a TF card, enter UVC camera mode.

Step 7. Reset:

When the glasses camera crashed state, press the reset button to reset it. The blue light turns off indicates that the system has been successfully reset and needs. restart for using.

Warm Notice:

- 1, Will not work without inserting memory card.
- 2, You can choose the included TF card reader to read the content, or you can directly connect the pen with the card inserted to the computer using the included data cable to read the content directly without removing the TF card from the pen.
- 3, Insert the included pin into the hole under the indicator light on the back to restore factory settings with one click.
- 4, If the TF Card is not inserted, the red and blue lights will interactive flash for 3s and automatically shut down. So, please insert the TF card and restart the machine.
- 5, This device is used for sports' DV recording, please do not use in other illegal ways.

Time Settings:

Time Settings:

Turn off the camera, connect computer via USB cable to enter the USB flash drive mode, open the "setTime.txt" document, input the time setting string, which consists of "year- month-day-time digits".

For example: Turn on Watermark: Y

Turn Off Watermark: N

*Open time display: 2023-03-28 23:59:59 Y

*Close time display: 2023-03-28 23:59:59 N

After changing, you just need to save the file and restart your camera.

Features:

Video Resolution:	1920 X1080P
Video Fps:	30fps
Maximum Memory Support:	128G
Power Supply:	5V1A

Technical Support:

Q1. Why there is no image shown in the video?

A1. Please confirm the camera lens is not being covered by a slide cover. If the lens is not covered, please contact customer service.

Q2. How long will it take to fully charge the battery? How much time can it work?

A2. It will take you about 2 hours to fully charge the battery. The camera can support up to 180mins recording after being fully charged.

Q3. Could i view this camera from my Android or iOS device like a baby monitor anytime. Is there an app?

A3. This item do not support Wi-Fi, Could not work with App. But it support replay the videos on android phone by Type-USB. (**Note:** iOS devices are not supported)

Q4. When attempting to play the recorded videos, I'm only getting audio, no video, just a black screen with audio.

A4. Please first confirm whether your video player supports the format of the video you record. Please download the "VLC media player" Software to replay the videos. There are many different computer system default media player. Some media player could not support this pen camera's video format.